



Repair Station: S7HR883J/ EASA: 145.5336
 2482 Progress Dr. Redding, CA 96001
 Phone: 530-221-4397 Fax: 530-221-0660

Capabilities for: ATR-42

ATA Chapter: 21	
Part #	Description
641134-4	OVERTEMP. SWITCH
627962-1	SENSOR, TEMP
625704-1	SENSOR, SKIN TEMP.
129580-6	TEMP. LIMITER
EVAC2423F1	FAN GROUND COOLING
EVAC2423FA	FAN GROUND COOLING
EVAC2423FB	FAN GROUND COOLING
EVAC2423FD	FAN GROUND COOLING
EVAC2423H	FAN GROUND COOLING
785403	SENSOR, TEMP.
779-407-925(TP3100-1-02)	CASSETTE PLAYER
DDT1P1291	HAND MIC
DDT1P1377	HAND MIC
HP2584	LOUD SPEAKER
866-210-951	LOUD SPEAKER
8260-120	STARTER GENERATOR
8260-121	STARTER GENERATOR
102003-11	GENERATOR CONT.UNIT
2136-315-80-11	AMP METER
UL700	HOT JUG
ATA Chapter: 26	
Part #	Description
51216-090	FIRE SENSING ELEMENT
51216-088	FIRE SENSING ELEMENT
51216-086	FIRE SENSING ELEMENT
51653-142	DETECTOR UNIT
51653-152	DETECTOR UNIT
FR3212	SMOKE DETECTOR
FR3222	SMOKE DETECTOR
B4ONA1500	SMOKE DETECTOR, FAN
FR3123	SMOKE DETECTOR
CG7GO	SMOKE DETECTOR
785-259-1	THERMAL SWITCH

ATA Chapter: 28	
Part #	Description
748-522-2	FUEL QTY. INDICATOR
749-159	FUEL QTY. INDICATOR
748-724	FUEL QTY. INDICATOR
796967	FUEL QTY. PRE-SELECTOR
748-600	DIAL ASSEMBLY
ATA Chapter: 30	
Part #	Description
0871BN3-3	ICE DETECTOR
0871BN3-5	ICE DETECTOR
ATA Chapter: 31	
Part #	Description
GTM4150	CLOCK
ATA Chapter: 33	
Part #	Description
Q17-94122051AA	CLOCK
E0332-01	UTILITY LIGHT
E0333-01	READING LIGHT
E0350-01	CEILING LIGHT
10-62A	CHART-HOLDER LIGHT
2LA003230-02	PASS.SIGHN
2LA005171-00	PASS.READING LIGHT
8ES005588-00	PASS.READING LIGHT PWR.UNIT
2LA002607-16	CEILING LIGHT
E0531-01	CEILING LIGHT
292-24	STROBE LIGHT
292-13	STROBE LIGHT
292-11	STROBE LIGHT
4295747	TAXI/TAKE-OFF LIGHT
4213966	LOGO LIGHT
R25-1-1	PWR SUPPLY, ANTI-COLL LIGHT
R25-1M2WREV1	ANTI-COLLISION LIGHT

Capabilities for: ATR-42

ATA Chapter: 33	
Part #	Description
R25-1M2BW	ANTI-COLLISION LIGHT
R25-1M2AWREV1	ANTI-COLLISION LIGHT
03-1802-2001	ANTI-COLLISION LIGHT
04-1505-1429	ANTI-COLLISION LIGHT,PWR SUPPLY
4285098	WING/ENGINE, SCAN LIGHT
301-1001	EMERGENCY EXIT, SIGN
301-1080	EMERGENCY EXIT, SIGN
301-1004	EMERGENCY PWR.SUPPLY
301-1160	EMERGENCY EXIT, SIGN
301-1206	EMERGENCY EXIT, SIGN
301-1210	FLOOD LIGHT, ASSY.
301-1180	EMERGENCY LIGHT, PWR SUPPLY
301-1185	EMERGENCY LIGHT, PWR SUPPLY
301-2119	EMERGENCY LIGHT
3678-553-80-12	ITT INDICATOR

Regards, Dave



Dave Chamberlain
Gen. Manager
aezdave@gamail.com